trogotronic »m«676™

Save yourself from injury & your 676 from damage! Use caution & always act in accordance to these instructions:


ALWAYS REMOVE POWER WHEN MODULE IS UNATTENDED! "INSIDE" OF MODULE HAS MANY SHARP EDGES & MAY CUT UNPROTECTED HANDS; HANDLE WITH CARE.

THE MODULE MUST NEVER BE POWERED WITHOUT **INSTALLATION IN AN APPROPRIATE ENCLOSURE; UNWARRANTED** DAMAGE TO 676 & MORTAL INJURY MAY RESULT.


TO AVOID SHOCK HAZARD ALWAYS WAIT 30 MINUTES AFTER REMOVING POWER BEFORE REMOVING MODULE FROM ENCLOSURE

- 1 » INSTALL 676 module in your enclosure carefully.
- 2 » TURN DOWN VOLUME twist to the left/counter clock wise.
- 3 » PATCH output jack to mixer, amplifier, module etc.
- 4 » ATTACH power supply 2.1mm male jack to 676 (front or rear).
- 5 » PLUG IN POWER SUPPLY to main power source.
- 6 » WARM UP full 15 seconds before carefully adjusting VOLUME.
- 7 » ALWAYS UNPLUG the power supply when unattended.
- * Get the MOST LIFE out of your TUBE: ALWAYS REMOVE POWER WHEN MODULE IS UNATTENDED!

Questions? 1-562-472-0672 or info@trogotronic.com More contact info at www.trogotronic.com

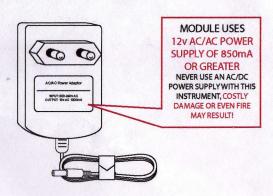

CAUTION: SHOCK HAZARD ON ENTIRE REAR OF MODULE AVOID CONTACT UNTIL 30 MINUTES AFTER REMOVING POWER! **NEVER POWER UP 676 WHEN MODULE** IS NOT COMPLETELY MOUNTED IN ENCLOSURE!

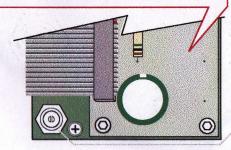

VOLUME ATTENUATOR Start low & add more level as needed. ATTENTION: 676 FURY IS A HIGH OUTPUT DEVICE! **VOLTAGE OVERLOAD COULD CAUSE DAMAGE TO YOUR OTHER** VALUABLE EQUIPMENT! Avoid exceeding the input amplitude specifications of your audio gear by using the 676's VOLUME knob with caution and common sense.

TRACK Electronic whammy bar. *CV kicks in > +8v DRIVE Go-to effect of overall sound w/ rich thresholds. *CV INDICATOR LAMPS seen behind vacuum tube. MODULATOR modulate/squash/expand overall sound. *CV OSC 2 Sets frequency. *CV OSC 1 Sets frequency. *CV



HANDMADE IN USA

STABILIZERS Stabilizer section allows the instrument to be used in multiple manners; Rule of thumb is up = stability, down = anarchy.

RECTIFY SWITCH on=smooths osc. control signal. THRUST SWITCH on=amplifies osc. control signal. SYNCH SWITCH on=distills osc. control signal.

CV INPUT/OSCILLATOR 2 (0 to +12v) *attenuated by OSC 2 knob. CV INPUT/OSCILLATOR 1 (0 to +12v) *attenuated by OSC 1 knob. LINE LEVEL AUDIO INPUT effects/triggers/filters/modulates circuit **VOLTAGE OVERLOAD OF LINE LEVEL AUDIO INPUT COULD CAUSE** DAMAGE YOUR MODULE! Do not exceed -6v to +6v amplitude.

AUDIO OUTPUT

ATTENTION: 676 FURY IS A HIGH OUTPUT DEVICE! **VOLTAGE OVERLOAD COULD CAUSE DAMAGE TO YOUR OTHER VALUABLE EQUIPMENT!** USE VOLUME KNOB TO ATTENUATE!

CV INPUT/TRACK KB (+8 to +12v) *attenuated by TRACK knob. CV INPUT/DRIVE KB (0 to +12v) *attenuated by DRIVE knob. CV INPUT/MOD KB (0 to +12v) *attenuated by MOD knob. POWER JACKS (use either front & back) 12v/AC/850ma

